

ForceGard Module

Model HM604-PLM

Instruction Manual

Important User Information

Solid state equipment has operational characteristics differing from those of electromechanical equipment. "Safety Guidelines for the Application, Installation and Maintenance of Solid State Controls" (Allen-Bradley Publication SGI-1.1) describes some important differences between solid state equipment and hard-wired electromechanical devices. Because of this difference, and also because of the wide variety of uses for solid state equipment, all persons responsible for applying this equipment must satisfy themselves that each intended application of this equipment is acceptable.

In no event will the Allen-Bradley Company or Helm Instrument Company be responsible or liable for indirect or consequential damages resulting from the use or application of this equipment.

The examples and diagrams in this manual are included solely for illustrative purposes. Because of the many variables and requirements associated with any particular installation, the Allen-Bradley Company or Helm Instrument Company cannot assume responsibility or liability for actual use based on the examples and diagrams.

No patent liability is assumed by Allen-Bradley Company or Helm Instrument Company with respect to use of information, circuits, equipment, or software described in this manual.

Reproduction of the contents of this manual, in whole or in part, without written permission of the Allen-Bradley Company and Helm Instrument Company is prohibited.

Throughout this manual we use note to make you aware of safety considerations.



ATTENTION: Identifies information about practices or circumstances that can lead to property damage. Identifies information that is especially important for successful application and understanding of the product.

Attentions help you:

- identify a hazard
- avoid the hazard
- recognize the consequences



ATTENTION: Please check power supply ratings before proceeding! Each tonnage module consumes (+24, 173 mA +5, 220mA). Be sure to not overload the power supply.

PLC, PLC2, PLC3, and PLC5 are registered trademarks of the Allen-Bradley Company, Inc.
SLC, SLC500, PanelView, RediPANEL, Dataliner are trademarks of Allen-Bradley Company, Inc.
IBM is a registered trademark of International Business Machines, Incorporated.
ForceGard is a registered trademark of the Helm Instrument Company, Inc.

**Table of Contents
ForceGard Load Module
User Manual**

Preface.....P-1
 Who Should Use this Manual P-1
 Purpose of this Manual P-1
 Contents of this Manual P-2
 Related Documentation P-3
 Terms and Abbreviations P-4
 Common Techniques Used in this Manual P-6
 Product Support..... P-6
 Your Questions or Comments on this Manual P-6

Overview

Chapter 1 1-1
 Trend Components 1-1
 Strain Gain Transducer Operation 1-1
 Features..... 1-1
 Hardware Overview 1-2
 Hardware Features 1-3

Getting Started

Chapter 2 2-1
 Getting Started..... 2-1
 Required Tools and Equipment 2-1
 System Operation 2-2
 Sensor Wiring 2-2

Channel Configuration, Data and Status

Chapter 3 3-1
 Channel Configuration, Data and Status 3-1
 Module Addressing 3-1
ForceGard Module ID Code 3535 3-1
 Data Table Memory Map 3-1
 Output Image 3-1
 Input Image..... 3-3
 Integer File..... 3-5

**Initial
 Setup
 Procedures**

Chapter 4 4-1

Initial Setup Procedures..... 4-1

 Step 1. Set the Run mode bit to Bypass..... 4-1

 Step 2. Balance Sensor Input..... 4-1

 Step 3. Set Calibration Numbers 4-2

 Step 4. Set Machine Capacity Cycle 4-2

 • Setting Machine Capacity Scale using (1) two
 Channel force module 4-2

 • Setting Machine Capacity Scale for multiple
 channel systems..... 4-3

 Step 5. Set Capacity Alarms..... 4-3

 Step 6. Set Minimum Low Alarm 4-4

 Step 7. Set Sample Count 4-5

 Step 8. Set Trend Alarms 4-6

 • Set High and Low Trend Alarm – Channel 1 4-6

 • Set High and Low Trend Alarm – Channel 2 4-7

Additional Application Notes 4-8

 Mode Status..... 4-8

 Bypass Mode 4-8

 Peak Mode..... 4-8

 Monitor Parts Mode 4-8

 Trend Calculation..... 4-9

 High Capacity and Low Minimum Alarm bits – Channel 1 & 2 ... 4-10

 Trend High and Low Alarm bits 4-11

 Machine \ Top Stop bit..... 4-12

 Low Alarm Inhibit 4-13

 Peak Look Window 4-14

**System
 Double-
 Hooking
 Guide**

Chapter 5 5-1

HT-400 Sensor Ohm Reading..... 5-1

Block Diagrams 5-2

Preface

Read this preface to familiarize yourself with the rest of this manual. This preface covers the following topics:

- who should use this manual
- the purpose of this manual
- terms and abbreviations
- conventions used in this manual
- Allen-Bradley support

**Who Should Use
this Manual**

Use this manual if you are responsible for the design, installation, programming, or maintenance of an automation control system that used Allen-Bradley small logic controllers.

You should have a basic understanding of SLC 500 products. You should understand electronic process control and be able to interpret the ladder logic instructions required to generate the electronic signals that control your application. If you do not, contact your local Allen-Bradley representative for the proper training before using this product.

**Purpose of
This Manual**

This manual is a learning and reference guide for the Helm ForceGard Module. It contains the information you need to install, wire, and use the module.

Chapter	Title	Content
	Preface	Describes the purpose, background, and scope of this manual. Also specifies the audience for whom this manual is intended and defines key terms and abbreviations used throughout this book.
1	Overview	Provides a hardware and system overview. Explains and illustrates the components of the system.
2	Installation and Wiring	Provides installation information and wiring guidelines.
3	Channel Configuration, Data and Status	Examines the channel configuration and the channel status word, and explains how the module uses configuration data and generates status during operation.
4	Ladder Programming Examples	Gives an example of the ladder logic required to define the channel for operation. Also includes representative examples for unique requirements such as sample count, trend calculation, etc.
5	Troubleshooting	Explains how to interpret and correct problems that occur while using the load module.
A	Specifications	Provides physical, electrical, Environmental, and functional Specifications for the module.
B	Ladder Program	
C	Panelview Screens	Shows Panelview Screens and explain their various functions.

**Related
Documentation**

The following documents contain information that may be helpful to you as you use Allen-Bradley SLC products. To obtain a copy of any of the Allen-Bradley documents listed, contact your local Allen-Bradley office or distributor.

For	Read this Document	Document Number
An overview for the SLC 500 family of products	SLC 500 System Overview	1747-2.30
A description on how to install and use your <i>Modular</i> SLC 500 programmable controller	Installation & Operation Manual for Modular Hardware Style Programmable Controllers	1747NI002
A description on how to install and use your <i>Fixed</i> SLC 500 programmable controller	Installation & Operation Manual for Fixed Hardware Style Programmable Controllers	1747-NI001
A procedural and reference manual for technical personnel who use an HHT to develop control applications	Allen-Bradley Hand-Held Terminal User's Manual	1747-NP002
An introduction to HHT for first-time users, containing basic concepts but focusing on simple tasks and exercises, and allowing the reader to begin programming in the shortest time possible	Getting Started Guide for HHT	1747-NM009
A resource manual and user's guide containing information about the analog modules used in your SLC 500 system	SLC 500 Analog I/O Modules User's Manual	1746-NM003
A complete listing of current Automation Group documentation, including ordering instructions. Also indicates whether the documents are available on CD-ROM or in multi-languages	Automation Group Publication Index	SD499
A glossary of industrial automation terms and abbreviations	Allen-Bradley Industrial Automation Glossary	ICCG-7.1
An article on wire sizes and types for grounding electrical equipment	National Electrical Code	Published by the National Fire Protection Association of Boston, MA.

Terms and Abbreviations

The following terms and abbreviations are used throughout this manual. For definitions of terms not listed here refer to *Allen-Bradley's Industrial Automation Glossary*, Publication ICCG-7.1.

Calibration - Procedure, performed by trained personnel, where machine or press is dynamically loaded to impact on load cells. A process of linearity measuring to determine the loading capacity of the machine.

Calibration Number - An amplification values established during machine calibration or pre-assigned on force load cells.

Channel - Refers to one of two, strain gage inputs available on the modules terminal block.

Chassis - A hardware assembly that houses devices such as I/O modules, adapter modules, processor modules, and power supplies.

Configuration Word - Contains the channel configuration information needed by the module to configure and operate each channel. Information is written to the configuration word through the logic supplied in your ladder program.

Data Word - A 16-bit integer that represent the value of the analog input channel. The channel data word is valid only when the channel is enabled.

ForceGard - Helm monitoring module; resides on the SLC (1746) backplane; provides processor input from up to two sensors.

Gain - Amplification of an input signal.

Load/Force - Measurement of impact during a machine cycle. Sensors provide the input for this measurement.

Look Window - Resolver or cam activated window which allows specific degrees in a machine cycle to be processed.

Low Alarm Inhibit - Number of consecutive machine cycles where low alarm is inhibited. Used in a process where machine cycles several times before running speed is established.

LSB - (Least Significant Bit) Refers to a data increment defined as the full scale range divided by the resolution. The bit that represents the smallest value within a string of bits.

Monitor Parts Mode - Status condition used during production run. Sample and compare logic is enabled. On resolver based systems, tracking alarm limits can be enabled.

Multiplexer - A switching system that allows several input signals to share a common A/D converter.

Press Curve - Machine manufacturers provide this data table which defines limits on maximum load that should be exerted at a given degree of press stroke. This data is stored in EEPROM memory in the Helm processing unit.

Press Curve Alarm - Indication of resolver position and load when load at a given degree meets or exceeds press curve profile.

Remote Configuration - A control system where the chassis can be located several thousand feet from the processor chassis. Chassis communication is via the 1747-SN Scanner and 1747-ASB Remote I/O Adapter.

Resolution - The smallest detectable change in a measurement, typically expressed in engineering units (e.g. 0.15C) or as a number of bits. For example a 12-bit system has 4,096 possible output states. It can therefore measure 1 part in 4096.

Resolver - Sometimes called encoder. Device attached on a machine to determine stroke position. Sine/cosine based resolver required for Helm systems.

Reverse Load - Measurement of negative load/force being exerted on machine following the break-through of material. Also referred to as snap through.

Sample - Load/force values established from a series of machine cycles. Also defined as benchmark.

Sample Count - User input value used to specify how many machine cycles to base the sample on.

Sampling time - The time required by the A/D converter to sample an input channel.

Scale - Value used to describe the press/machine overall tonnage. Set for maximum value of one channel. For example, settings for a 150 ton press = 75.

Setup Mode - Status condition of monitor typically enables during die setup. Machine capacity alarms are enabled. On resolver based systems, press curve alarm can be enabled. This mode is also used during machine and resolver calibrations.

Status Word - Contains status information about the channel's current configuration and operational state. You can use this information in your ladder program to determine whether the channel data word is valid.

Target Load - A reference load established by the user. Used primarily during setup to improve setup time.

Tolerance /Trend Alarm - User defined upper and lower control limits established during the sample and compare process. These limits are established on the peak load and will activate the machine stop relay when exceeded.

Tracking Alarm - Requires resolver input. The sample and compare process is applied to the entire forming force based on user selected upper and lower control limits.

Trend Deviation - Percent of change, high and low, from sample value to current value.

TSM - Acronym for Through-the-Stroke load monitoring. Resolver input is required for monitoring the load being developed during machine cycle.

Update Time - The time required for the module to sample and convert the input signals of all enabled input channels and make the resulting data values available to the SLC processor.

**Common
Techniques
Used in this
Manual**

The following conventions are used throughout this manual:

- Bulleted lists such as this one provide information, not procedural steps.
- Numbered lists provide sequential steps or hierarchical information.

**Product
Support**

Contact your Helm representative or call Helm direct at 419/893-4356:

- sales and order support
- product technical training
- warranty support
- support service agreements

Your Questions or Comments on this Manual

If you have any suggestions for how this manual could be made more useful to you, please send us your ideas.

Overview

You have just purchased the most advanced load monitoring solution available. HELM INSTRUMENT COMPANY, INC. manufactures a complete line of load monitoring control solutions for use on metal stamping, forging, compaction and assembly presses; cold forming, cold heating, injection molding and die cast machines.

Standard or custom transducers and load cells are available for in-die monitoring of transfer or progressive tooling.

At HELM, quality is inherent not only in the design of our products but in the attitudes of our employees as well. We're working together to give you the best. After all, that's what our business is all about - providing innovative instrumentation to help make your manufacturing process more productive and your operation more effective.

The Helm ForceGard combines machine and tooling monitoring with programmable limit switch function. User programmable high and low limits protect the machine and tooling to ensure part quality.

Critical setup information can be stored and uploaded as part of a die recipe program. An optional resolver input module is used to compare machine/press tonnage to crank angle for real time signature analysis.

Components

The Helm ForceGard module resides on the backplane of the Allen-Bradley 1746 SLC-5/03. The system is comprised of two parts; the input module and two Helm Strain gage based sensors.


Strain Gain Transducer Operation

The primary part of the load monitoring system centers around the measurement. The basic function of the Helm Strain Gain sensor is to detect the amount of deflection imposed on the press or die as parts are being formed. All Strain Gain sensors are matched to within 1% and therefore can be replaced without recalibration of the machine.

The Helm Strain Gain sensors can be mounted to strategic high stress areas of the machine frame or strategically located in tooling or applied to stop blocks. Signals from these sensors are routed to the ForceGard module for processing. The Helm Strain Gage is capable of measuring either a tension or compression signal.

ForceGard Features

- Sample and Compare Logic - processor memorizes the sample or benchmark load and compares each machine cycle against this sample.
- User programmable Sample Count - selectable number of machine cycles on which to base the sample.
- High and Low Capacity Alarm Sets - a discrete load limit for a maximum allowable load and a minimum allowable load.
- High and Low Trend Alarm Sets - set as a percentage of load change on an established sample.
- Low Alarm Inhibit - User programmable option to disable low alarm during process start-up.

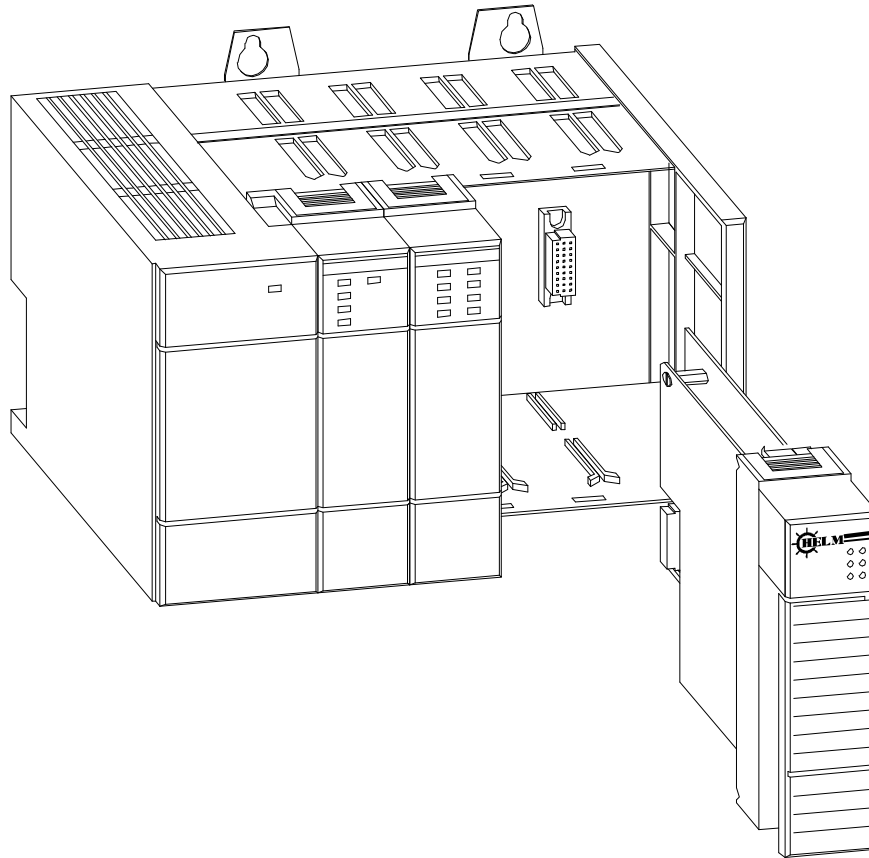

Hardware Overview

The force module fits into any single-slot, except the processor slot(0). It is a Class 1 module (uses eight input words and eight output words). It interfaces to strain gage based transducers (350ohm or 700ohm).

The module can accept input from two sensors. The module has no output channels. Module configuration requires manual and user programmable setup.


The ForceGard module receives and stores digitally converted analog data into its image table for retrieval by modular SLC 500 processors. The module supports connections from any combination of up to two strain gage sensors.

Any combination of Helm Strain Gage sensors can be used. Contact Helm for additional information on the type and application of different sensor options.



The Helm module requires (1) input from a cam switch or a proximity sensor for establishing the peak look window

Hardware Features

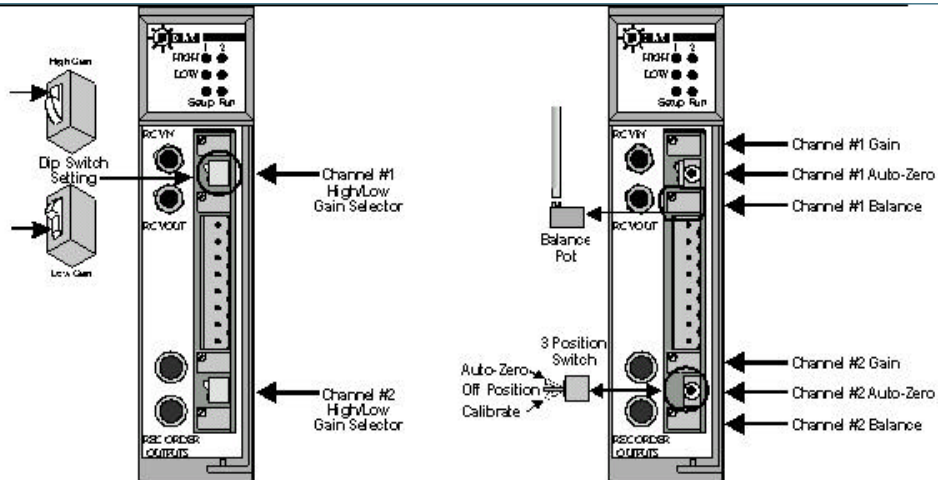

Channel Status Displays	Fault Status - High and Low
Door Label	Channel 1-Channel 2 calibrate switch Wiring diagram for (2) sensor inputs
Mode Status LED's High/Low LED's	Displays Run Mode Indicate Alarm Condition
Receive IN	Jack plug for resolver input from Helm resolver module
Receive OUT	Jack plug for link to additional ForceGard modules
Recorder Output	Jacks for analog or track output of sensor data. One jack for each channel. Can be used with chart recorders or Helm Ramcorder™ data recorder.
Bypass/Run Switch Normal run state is top (ON) position.	Three-way switch used during calibration process. Top position is for normal run condition. Center position is used to zero balance sensor input via potentiometers. Bottom position is used to set calibration values via potentiometers.
Potentiometers: Channel Sensor Balance Channel Calibration Set	Two per channel. These small multi-turn pots are used for zero balancing the sensor and setting the calibration values.
Gain Selector	Used to amplify the sensor input. This switch is factory set at high range. Under normal operating conditions, the setting should not be changed. Personnel responsible for the calibration of the Helm ForceGard module make the determination of the range setting during the calibration process.
8-Pin Conductor	For sensor input wiring.

Getting Started

This chapter can help you to get started using the Helm ForceGard module. The procedures included here assume that you have a basic understanding of SLC 500 products. You should understand electronic process control and be able to interpret the ladder logic instructions required to generate the electronic signals that control your application.

Because it is a start-up guide, this chapter does not contain detailed explanations about the procedures listed. It does, however, reference other chapters in this book where you can get more information about applying the procedures described in each step. It also references other SLC documentation that may be helpful if you are unfamiliar with programming techniques or system installation requirements.

If you have any questions or are unfamiliar with the terms used or concepts presented in the procedural steps, always read the referenced chapters and other recommended documentation before trying to apply the information.

This chapter will:

- tell you what equipment you need
- explain how to install and wire the module
- show you how to set channels for the sensor input

Required Tools and Equipment

Have the following tools and equipment ready:

- small blade screwdriver
- potentiometer trimmer (tweezer)
- appropriate strain gage cable
- programming equipment (All programming examples shown in this manual demonstrate the use of Allen-Bradley's RS Logix 500 Rev. 3.01 for personal computers.)


System Operation


The ForceGard module communicates to the SLC processor through the parallel backplane interface and receives +5Vdc and +24Vdc power from the SLC power supply through the backplane. No external power supply is required. You may install as many ForceGard modules in your system as the power supply can support.

Each individual channel on the module can receive input signals from strain gage based sensors. The module converts the analog values directly into digital values.

Sensor Wiring


The module contains an 8-pin orange connector for wiring to the load cells. The pin-out is shown below.

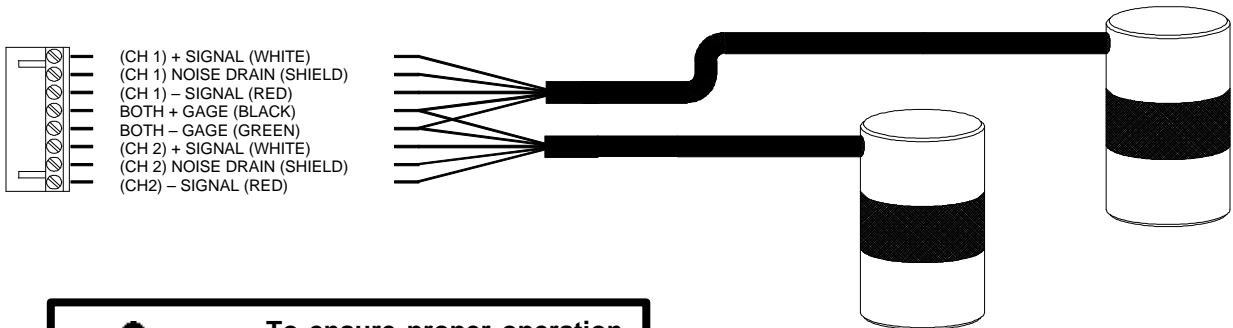




To ensure proper operation and high immunity to electrical noise, always use Helm strain gage cable.

To limit noise, keep strain gage cable as far away as possible from power and load lines.



The module can support up to two sensor inputs DO NOT attempt to parallel additional gages as you will cause damage to the module and void product warranty.

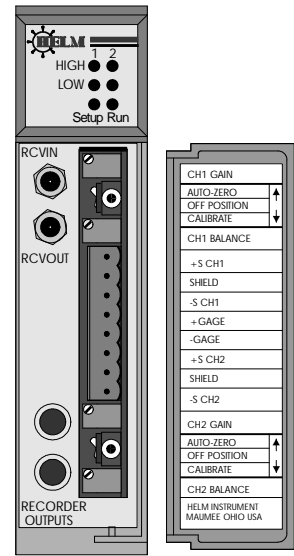

Channel Configuration Data and Status

This chapter explains how the ForceGard module and the SLC processor communicate through the module's input and output image. It lists the preliminary setup and operation required before the module can function in a 1746 I/O system.

Module Addressing

The module identification code is a unique number encoded for each 1746 I/O module. This code defines for the processor the type of specialty I/O module residing in a specific slot in the chassis. With RS Logic 500 software, manually enter the module ID code.

ForceGard Module ID Code 3535

No special I/O configuration (SPIO CONFIG) information is required. The module ID code automatically assigns the correct number of input and output words. The following memory map shows how the output and input image tables are defined.

Output Image

The 8 word output image (output from the CPU to the module) contains information that you configure to define the way a specific channel will work. Example – If you want to configure channel 2 on the module located in slot 4 in the SLC chassis, your address would be O:4.2.

(o = file type : =element delimiter 4=slot . =word delimiter 2=word)

Bit	Look Window Signal CH 1&2	O:e.0/0
Bit	Bypass Mode CH 1&2	O:e.0/1
Bit	Peak Mode CH 1&2	O:e.0/2
Bit	Monitor Parts Mode Bit	O:e.0/3
Bit	Alarm Reset CH 1&2	O:e.0/4
Bit	Reverse Load CH 1&2	O:e.0/5
Bit	Low Alarm Inhibit CH 1&2	O:e.0/6
Bit	Reserved	O:e.0/7
Bit	D0 Bit of Sample Count	O:e.0/8
Bit	D1 Bit of Sample Count	O:e.0/9
Bit	D2 Bit of Sample Count	O:e.0/10
Bit	D3 Bit of Sample Count	O:e.0/11
Bit	D4 Bit of Sample Count	O:e.0/12
Integer	Scale Value	O:e.1
Integer	Capacity Low Alarm Setting Channel 1	O:e.2
Integer	Capacity High Alarm Setting Channel 1	O:e.3
Integer	Capacity Low Alarm Setting Channel 2	O:e.4
Integer	Capacity High Alarm Setting Channel 2	O:e.5
Integer	Trend High/Low Alarm Setting Channel 1	O:e.6
Integer	Trend High/Low Alarm Setting Channel 2	O:e.7

**Output
Image
(cont.)****Peak Look Window Bit 0 (O:2/0)**

When set on (1) the look window is active. When set off (0), the look window is inactive. The module will process data while look window is active.

Bypass Mode Bit (O:2/)

When set on (1) module is in calibration mode. Channels are disabled. No alarms are active. Only occurs when in Tonnage Calibration Screen.

Peak Mode Bit (O:2/2)

When set on (1) module is in setup (peak only monitoring) mode. Capacity alarms are active.

Alarm Reset Bit (O:2/4)

When set on (1) alarm reset occurs. Alarm condition must be cleared.

Reverse Load Bit (O:2/5)

When set on(1) reverse load values are stored (l:e.1 - l:e.2).

Low Alarm Inhibit Bit (O:2/6)

When set on (1) low alarming is disabled for duration. Duration set in ladder counter file.

Machine Capacity Scale Setting (Integer Word O:2.1)

Represents the total load rating of each load cell. The Range of the cells being used are 20 Ton. A value must be present to enable module functionality.

Minimum Load Alarm Setting Channel 1 (Integer Word O:e.2)

Integer value of low capacity alarm setting. Range = 0 to 9999. A value of 0 disables alarm.

Capacity Load Alarm Setting Channel 1 (Integer Word O:e.3)

Integer value of high capacity alarm setting. Range = 0 to 9999. A value of 0 disables alarm.

Minimum Load Alarm Setting Channel 2 (Integer Word O:e.4)

Integer value of low capacity alarm setting. Range = 0 to 9999. A value of 0 disables alarm.

Capacity Alarm - High Setting Channel 2 (Integer Word O:e.5)

Integer value of low capacity alarm setting. Range = 0 to 9999

Trend Alarm - Channel 1 High and Low (Integer Word O:e.6)

Integer values of high and low trend alarm settings. Values are set in percent and represent The maximum and minimum percent of change off the sample value.

Range = 0 to 99%. A value of 2520 represents a 25% high alarm and a 20% low alarm. A value of 0 disables alarm.

Data Table Input Image

The 8-word module input image (input from the module to the CPU) represents data words and status words. Input words (data words) hold the input data that represents the values of the sensor inputs.

Input words (status bits) contain the various status conditions and reflect the configuration settings you have entered into the output configuration words.

To obtain the status of Channel 2 Capacity Alarm Bit of the module located in slot 2 of the rack, use address I:2

(I =file type : =element delimiter 2 =slot . =word delimiter 0 =word / 2 =bit)

Bit	Channel 1 High Capacity Alarm Bit	I:e.0/0
Bit	Channel 1 Low Capacity Alarm Bit	I:e.0/1
Bit	Channel 2 High Capacity Alarm Bit	I:e.0/2
Bit	Channel 2 Low Capacity Alarm Bit	I:e.0/3
Bit	Channel 1 Trend High Alarm Bit	I:e.0/4
Bit	Channel 1 Trend Low Alarm Bit	I:e.0/5
Bit	Channel 2 Trend High Alarm Bit	I:e.0/6
Bit	Channel 2 Trend Low Alarm Bit	I:e.0/7
Bit	Learn Cycle Indicator Bit	I:e.0/9
Integer	Channel 1 Load Value	I:e.1
Integer	Channel 2 Load Value	I:e.2
Integer	Internal register for calculating CH1 trend	I:e.3
Integer	Internal register for calculating CH2 trend	I:e.4
Integer	Percent of Deviation Channel 1	I:e.5
Integer	Percent of Deviation Channel 2	I:e.6
Integer	Sample Count	I:e.7

Channel 1 High Capacity Alarm Bit

When on (1) channel 1 load has met or exceeded the high alarm limit. Load values are stored at integer word I:e.1.

Channel 1 Low Capacity Alarm Bit

When on (1) channel 1 load has met or dropped below the low alarm limit. Load values are stored at integer word I:e.1.

Channel 2 High Capacity Alarm Bit

When on (1) channel 2 load has met or exceeded the high alarm limit. Load value is stored at integer word I:e.2.

Channel 2 Low Capacity Alarm Bit

When on (1) channel 2 load has met or dropped below the low alarm limit. Load value is stored at integer word I:e.2

Channel 1 High Trend Alarm Bit

When on (1) channel 1 load has met or exceeded the high alarm percentage of sample.
Load values are stored at integer word I:e.1.
Percent of deviation of sample is stored at integer word I:e.5
Percent of deviation of sample is stored at integer word I:e.5

Channel 1 Low Trend Alarm Bit

When on (1) channel 1 load has met or dropped below the low alarm percentage of sample.
Load values are stored at integer word I:e.1.
Percent of deviation of sample is stored at integer word I:e.5

Channel 2 High Trend Alarm Bit

When on (1) channel 2 load has met or exceeded the high alarm limit.
Load value is stored at integer word I:e.2.
Percent of deviation of sample is stored at integer word I:e.6

Channel 2 Low Trend Alarm Bit

When on (1) channel 2 load has met or dropped below the low alarm percentage of sample.
Load value is stored at integer word I:e.2.
Percent of deviation of sample is stored at integer word I:e.6

Channel 1 Load Value (I:e.1)

Integer word represents peak load on channel 1 for current machine cycle.
If Reverse Bit (O:e.0/5) is on (1) value is reverse load on channel 1 for current machine cycle.

Channel 2 Load Value (I:e.2)

Integer word represents peak load on channel 2 for current machine cycle.
If Reverse Bit (O:e.0/5) is on (1) value is reverse load on channel 2 for current machine cycle.

Note: If O:e.0/1 is set to 1 then A/D Value is integer word for calibration set.

Channel 1 Sample Value (I:e.3)

Integer word represents sample load value on channel 1. High and low trend alarms are established on this value.

Channel 2 Sample Value (I:e.4)

Integer word represents sample load value on channel 2. High and low trend alarms are established on this value.

Channel 1 Percent of Deviation (I:e.5)

Integer word represents the percentage of change current peak load is to sample peak load.

Channel 2 Percent of Deviation (I:e.6)

Integer word represents the percentage of change current peak load is to sample peak load.

Sample Counter (I:e.7)

Counter used for number of Sample Count.

Using RS Logics 500 software, reserve one integer file for tonnage monitoring. Reserve one counter for tonnage monitoring.

For illustration purposes in this manual, we have reserved Integer file N10:0 - N10:23.

Data	Description	Address
Integer	Trend Calculation Register	N10:0
Integer	Channel 1 Trend Deviation information	N10:1
Integer	Channel 2 Trend Deviation information	N10:2
Integer	Channel 1 Low Trend Alarm Setting	N10:3
Integer	Channel 1 High Trend Alarm Setting	N10:4
Integer	Channel 2 Low Trend Alarm Setting	N10:5
Integer	Channel 2 High Trend Alarm Setting	N10:6
Integer	Multiply by 256 Register	N10:7
Integer	Channel 1 Peak Data	N10:8
Integer	Channel 2 Peak Data	N10:9
Integer	Channel 1 High Capacity Alarm Setting	N10:11
Integer	Channel 2 High Capacity Alarm Setting	N10:12
Integer	Channel 1 Low Capacity Alarm Setting	N10:13
Integer	Channel 2 Low Capacity Alarm Setting	N10:14
Integer	Scale	N10:15
Bit	Channel 1 High Capacity Alarm	N10:16/0
Bit	Channel 1 Low Capacity Alarm	N10:16/1
Bit	Channel 2 High Capacity Alarm	N10:16/2
Bit	Channel 2 Low Capacity Alarm	N10:16/3
Bit	Channel 1 High Trend Alarm	N10:16/4
Bit	Channel 1 Low Trend Alarm	N10:16/5
Bit	Channel 2 High Trend Alarm	N10:16/6
Bit	Channel 2 Low Trend Alarm	N10:16/7
Bit	Learn Cycle Bit	N10:16/9
Bit	Low Alarm Inhibit Bit	N10:16/10
Bit	Alarm Bit Indication (Module Alarm Bit)	N10:16/11
Integer	Low Inhibit Cycle Count	N10:17
Integer	# Samples (set from 0-16)	N10:18
Integer	Current running sample counter	N10:19
Integer	Panel Mode Status Value	N10:20
Bit	Panel and Module Cam Cycle Bit	N10:21/0
Bit	Start/Stop Indicator Bit	N10:21/1
Bit	Reverse Load Bit	N10:21/6
Bit	Alarm Reset Bit	N10:21/7
Integer	Channel 1 Calibration Value	N10:22
Integer	Channel 2 Calibration Value	N10:23

Step 3. Set Calibration Numbers

1. Set three-position switch to calibrate (down) position
 2. Turn Gain Potentiometer to dial in calibration numbers.
 3. If two sensors are wired, follow this procedure for both channels.
- ⇒ If you are using Helm Panel Software select the SET CAL NO. Menu. Adjust gain balance pot until calibration numbers are correct for channel 1 and channel 2.



Always make sure that the three-position switch is in ON (top) position for Normal operation.

The remaining setup procedures can be accomplished with the Run Mode bit in either Bypass, Peak or Monitor Parts Mode. However, the Bypass Mode should only be used when setting calibration values or zero balancing the sensor input.

Step 4. Set Machine Capacity Scale

The three position switch should be placed in the ON (top) position.

This setting is based off of one channel. It represents the maximum allowable load or tonnage from one sensor location. Integer N10:15 should be set from your operator interface.

Rung 3:21

```

CH'S 1&2
SCALE INFO
+MOV-----+
+MOVE      +-
|Source    N10:15|
|          0     |
|Dest      0:4.1 |
|          0     |
+-----+
  
```

Setting Machine Capacity Scale using (1) two channel force module:

If 2 sensors are installed on the left and right sides of a 60 ton press, set the Scale to 30 (maximum capacity of one sensor).

Use the following table as a reference for setting the Machine Capacity Scale for a single force module installation with two sensors. Divide the press/machine capacity by the number of sensors (2) and set Scale to the result.

PRESS CAPACITY	SCALE SETTING	PRESS CAPACITY	SWITCH SETTING	PRESS CAPACITY	SWITCH SETTING
20	10	30	15	40	20
45	22	50	25	60	30
80	40	110	55	150	75
...					
200	100	250	125	300	150

If 2 sensors are installed in the tooling rather than on the press structure, set the Machine Capacity Scale to the highest load/tonnage of one sensor.

Setting Machine Capacity Scale for multiple channel systems.

Divide the Machine capacity by the number of sensors and set Machine Capacity Scale on all modules to the result.

Example: If 2 load modules are used for monitoring a straight side press with 4 sensors mounted on the press columns, set the Machine Capacity Scale on both modules to the highest load/tonnage of one sensor.

Use the following table as a reference for setting the Machine Capacity Scale for a system comprised of (2) force modules and (4) sensors.

PRESS CAPACITY	SWITCH SETTING (same on all modules)	PRESS CAPACITY	SWITCH SETTING (same on all modules)	PRESS CAPACITY	SWITCH SETTING (same on all modules)
100	25	125	31	150	37
175	43	200	50	250	62
275	68	300	75	350	87
400	100	450	112	500	125
...					
800	200	1000	250	1200	300

Step 5. Set Capacity Alarms

This value is a discrete load/tonnage value, not a percentage.

NOTE: Although the range of values for capacity alarm settings is 0 to 9999, it is recommended that you do not enter values that exceed the capacity rating of the machine/press. A value of 0 disables capacity alarm set.

To determine the maximum rating for each channel, divide the total machine/press capacity by the number of sensor inputs. EXAMPLE: A press or slide rated at 100 tons with a (2) channel force module would have a capacity alarm setting of 50 tons per sensor input.

This setting differs from the Scale setting as it can be adjusted up or down depending on the nature of the process.

The recommended maximum value is 195% of Machine Capacity Scale.

Rung 3:23



Step 6. Set Minimum Low Alarm

This value is a discrete load/tonnage value, not a percentage.

The range of this value is 0 to 9999. A value of 0 disables Minimum Low Alarm. Use a value here that represents a minimum load/tonnage that is acceptable for the process.

Use this alarm setting when running in Peak Mode to alarm against low load/tonnage hits.


Rung 3:22

```
CH1 LOW  
CAPACITY  
ALARM  
SETTING  
+MOV-----+  
+MOVE      +  
|Source     N10:13|  
|           0|  
|Dest       0:4.2|  
|           0|  
+-----+
```


Step 7. Set Sample Count

The sample count is a user programmable parameter that tells the processor how many machine strokes are required to establish sample or benchmark load values. The value can range from 0 to 16. A value of 0 invalidates the Monitor Parts mode. You should set Sample Count to a minimum of 1 to enable Monitor Parts mode.

Note: Each time you change Monitor Parts mode bit from ON to OFF, the sample value is cleared. During normal operations, Monitor Parts mode is enabled when beginning a process run. If the process varies due to change in material thickness, for example, it may be necessary to take a new sample.

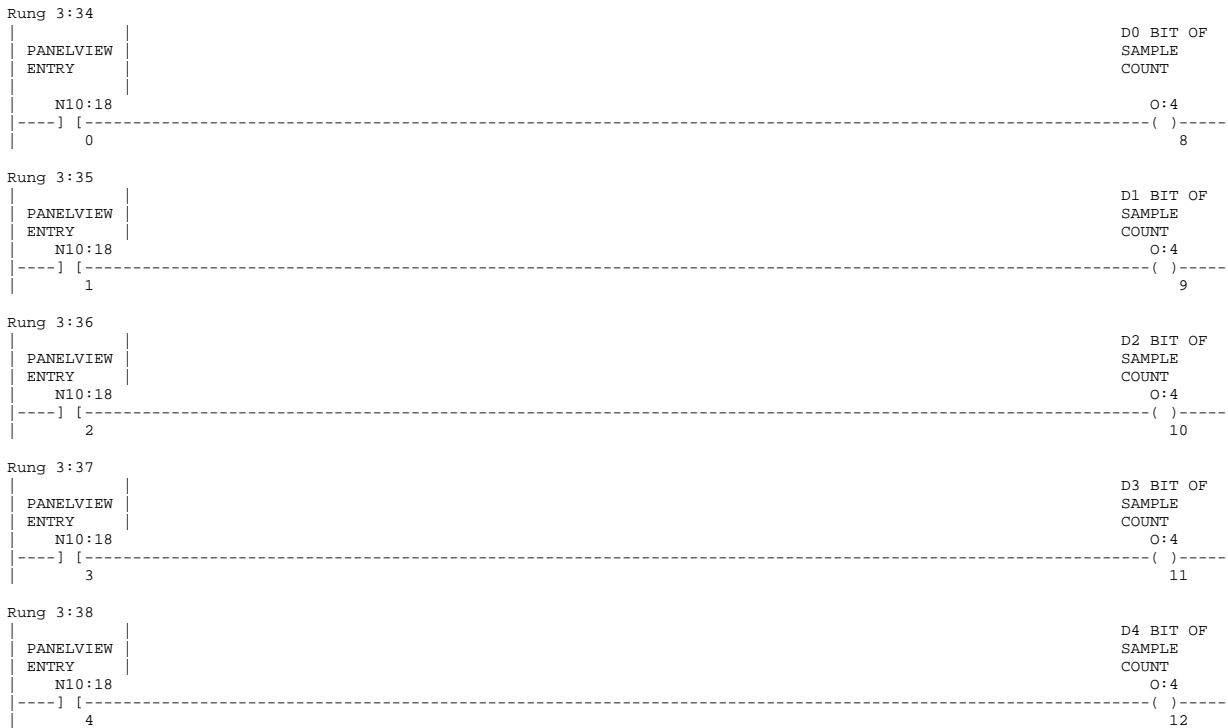

Step 8. Set Trend Alarms

The Trend Alarm settings are established as a percentage of allowable change in load. These percentages are applied to the sample load values. There is a High Trend Alarm set and a Low Trend Alarm set for each channel. The limits can range from 0 to 99%. A setting of 0 disables the alarm.

These alarms are active when the Monitor Parts Mode bit is ON. When monitor parts mode is enabled, the sample process takes place.

Example: Monitor Parts mode is enabled with a sample count of 4 and high and low Trend Alarms set at 10%. The load generated on the next 4 machine cycles is averaged to obtain the sample value for each channel. A sample of 30 tons is calculated for channel 1 and a sample of 40 tons is calculated for channel 2.

If any succeeding machine stroke develops tonnage of 33 (10% of 30 = 3 tons) or higher on channel 1 the High Trend Alarm is reached and the alarm bit is turned ON. If tonnage falls to 27, the Low Trend Alarm set is reached and the alarm bit is turned ON.

Set High and Low Trend Alarm - Channel 1

Example shows high and low setting at 10%

Rung 3:28

TREND HIGH AND LOW ALARM CALCULATION

+MUL-----+	
+MULTIPLY +--+	
Source A	N10:4
	0
Source B	256
Dest	N10:7
	0
+-----+	
TREND HIGH\LOW ALARM SETTING FOR CH1	
+ADD-----+	
+--ADD +--+	
Source A	N10:7
	0
Source B	N10:3
	0
Dest	O:4.6
	0
+-----+	

Set High and Low Trend Alarm - Channel 2

Example shows a high and low setting of 10%

Rung 3:29
TREND HIGH AND LOW ALARM CALCULATION

```
+-----+
+MULTIPLY+
|Source A  N10:6|
|          0   |
|Source B  256|
|          0   |
|Dest      N10:7|
|          0   |
+-----+
TREND
HIGH\LOW
ALARM
SETTING
FOR CH2
+-----+
+ADD+
+ADD+
|Source A  N10:7|
|          0   |
|Source B  N10:5|
|          0   |
|Dest      0:4.7|
|          0   |
+-----+
```

You have completed the basic setup and the module is operational.

Trend Calculation

The Trend Calculation is an integer value that represents the deviation percentage. The value calculation is based off of the peak, sample and trend percent. The following example shows the calculation.

```


Rung 3:26
THIS RUNG CALCULATES THE TREND DEVIATION WHICH IS DISPLAYED ON THE PANELVIEW
PANELVIEW
MODE
BUTTON
(MONITOR
PARTS)
  N10:20
] [-----]
  5

```

+SUB-----+	
+SUBTRACT	
Source A	I:4.5
	0
Source B	I:4.3
	0
Dest	N10:0
	0
+MUL-----+	
+MULTIPLY	
Source A	N10:0
	0
Source B	100
	0
Dest	N10:0
	0
CH1 TREND DEVIATION	
+DIV-----+	
+DIVIDE	
Source A	N10:0
	0
Source B	I:4.3
	0
Dest	N10:1
	0
+-----+	

Alarm Bits - 9 bits used to determine which alarm condition is detected.

High Capacity and Low Capacity Alarm bits - Channel 1 & Channel 2

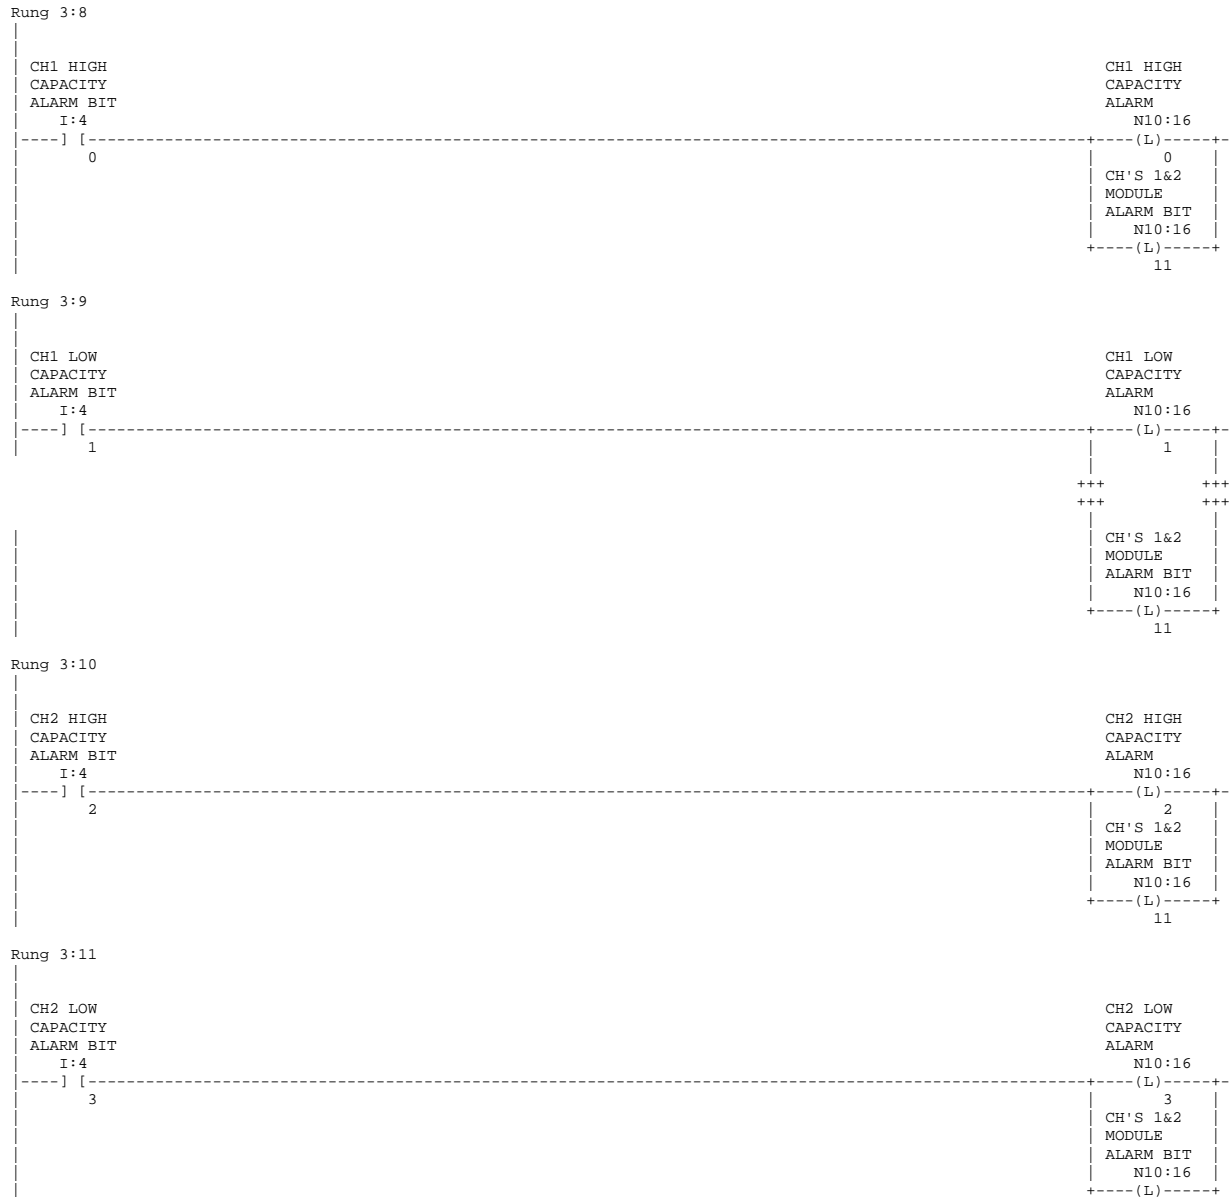

Trend High and Low Alarm bits

Rung 3:12



Rung 3:13



Rung 3:14



Rung 3:15



Machine / Top Stop bit

```
Rung 2:13
CAUSES EITHER E-STOP OR TOP STOP RELAY TO DROP OUT WHEN THERE IS A TONNAGE
FAULT
| CH'S 1&2 | | E-STOP OR |
| MODULE | | TOP STOP |
| ALARM BIT | | RELAY |
| N10:16 | | O:2 |
|-----|/|----- ( )-----|
| 11 | | 0 |
```

NOTE: Customer mapped in output module.

Peak Look Window

The following example details the peak look window requirement.

```

Rung 2:3
SETS UP CAM WINDOW FOR TONNAGE MODULE

+LIM-----+
-LIMIT TEST +-----+
|Low Lim    90|-----+
|Test       N153:0|
|           0|
|High Lim   220|
+-----+

PANELVIEW
AND CH'S
1&2 MODULE
CAM CYCLE
BIT
N10:21
( )---
0
  
```

- OR -

```

Rung 2:7
| prox probe |
| or rotary  |
| cam input  |
| I:4        |
|-----] [-----]
|           0|-----] [-----]
|                                     |
| ch's 1&2  |
| cam bit   |
| N10:21    |
|-----] [-----]
|           0|-----] [-----]
  
```

Note: Customer mapped in input.

Input for the Look Window can be obtained from a rotary cam limit switch, proximity probe or position resolver.

N10:21/1 Indicates the machine stop and start status on the Panel.
This bit is set to 1 (ON) when a module alarm occurs.


N10:21/0 Set bit to 1 (ON) during peak window time, clear at other times.





Make sure three position
switch is in top (ON) position.
(See diagram page 1-3)


HT-400 Sensor Ohm Readings


Green-Black.	350 ohms
Red-White	350 ohms
All other color combinations.	266 ohms
All colors to Ground.	open
Shield to Ground	open

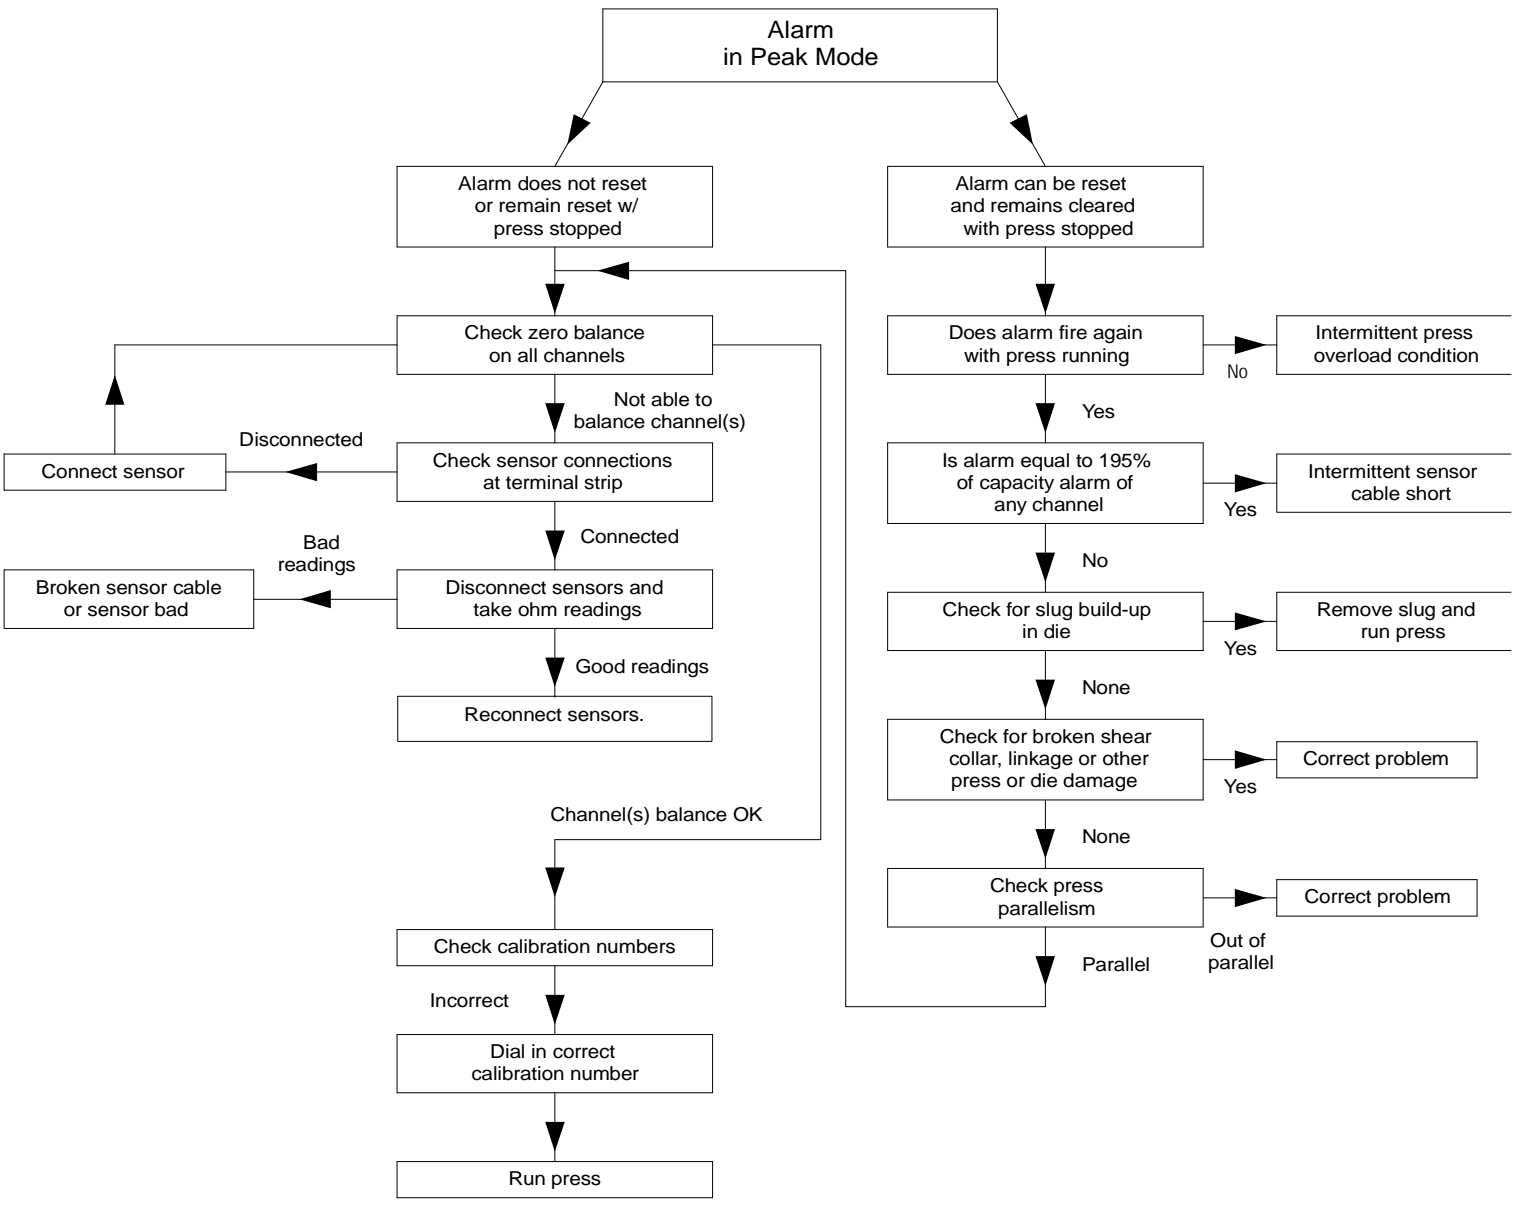

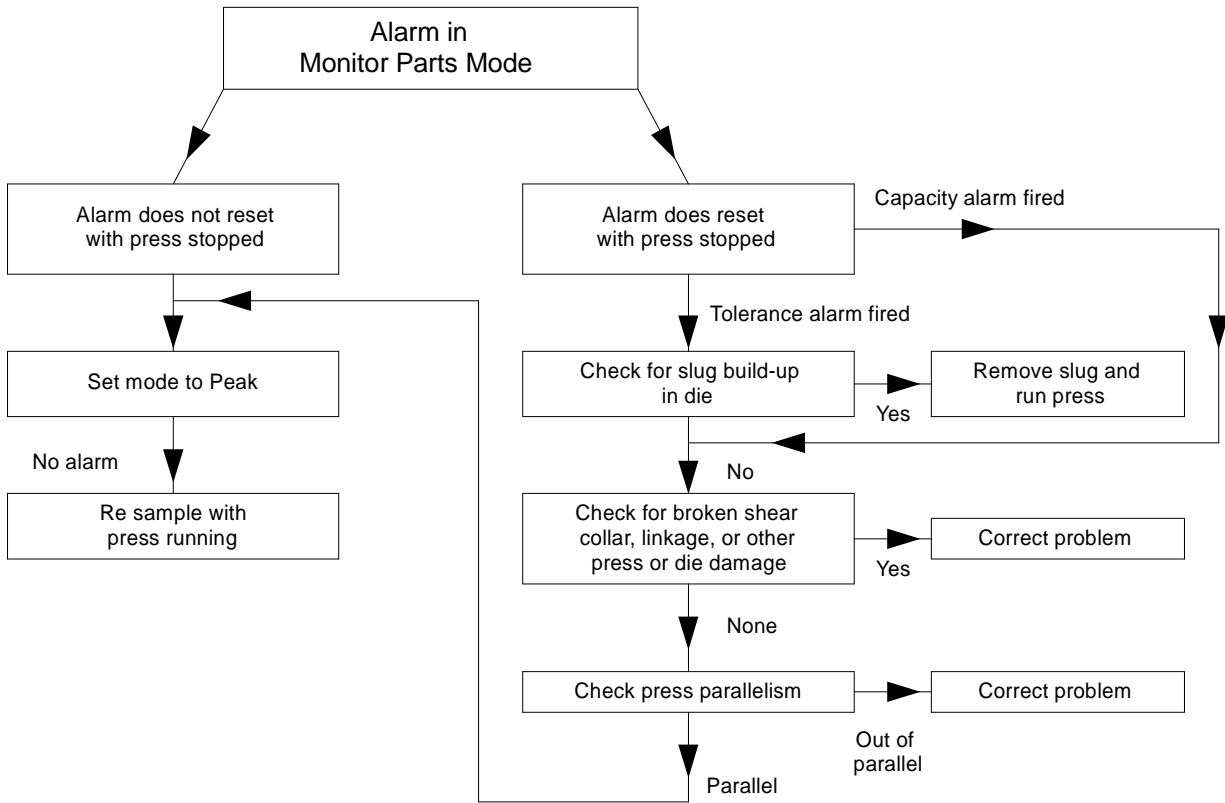

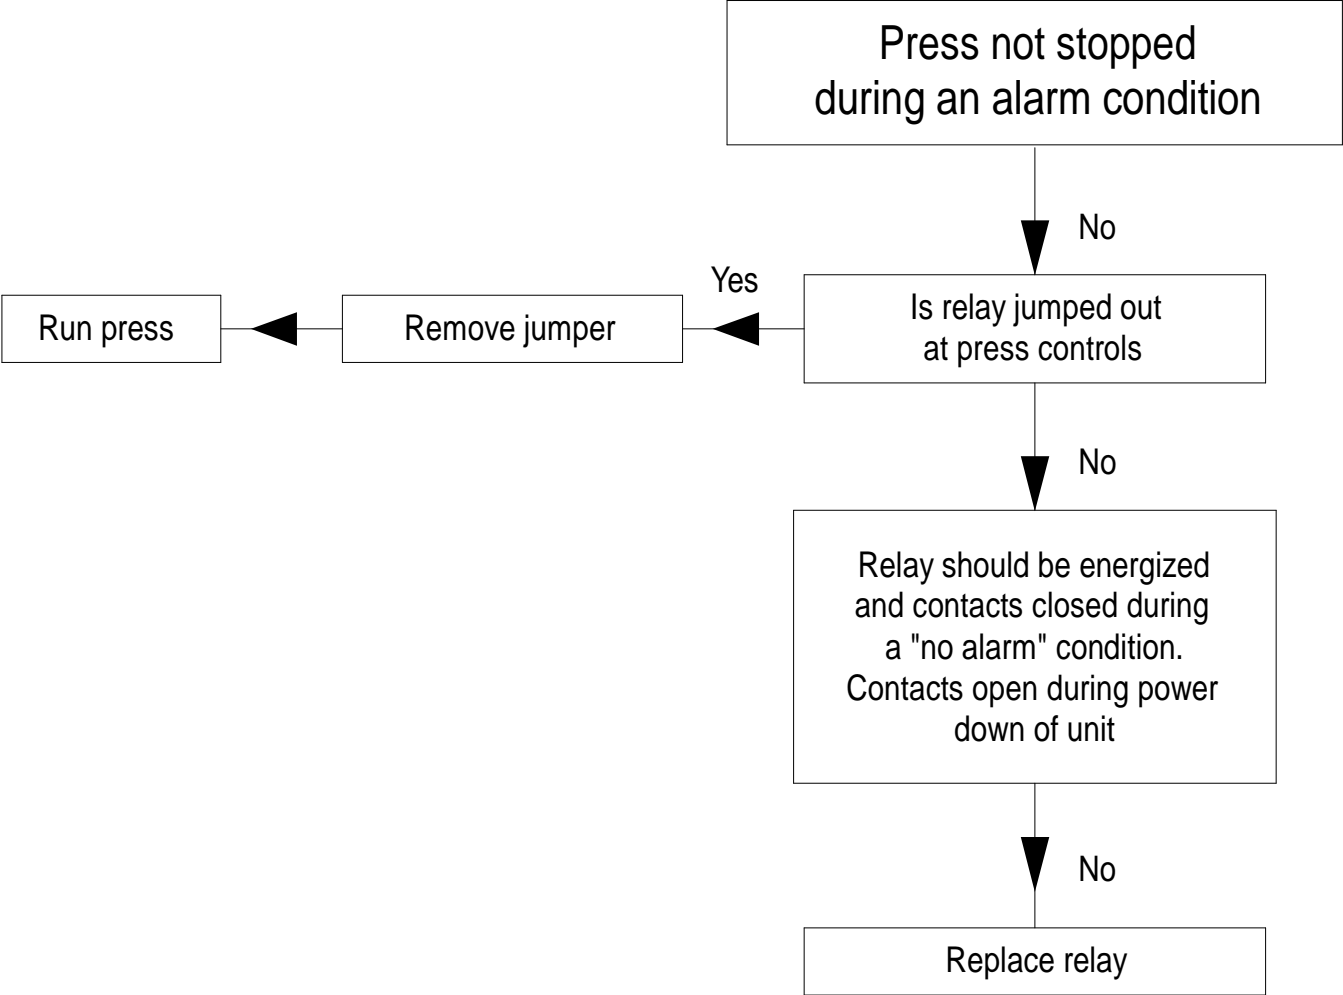

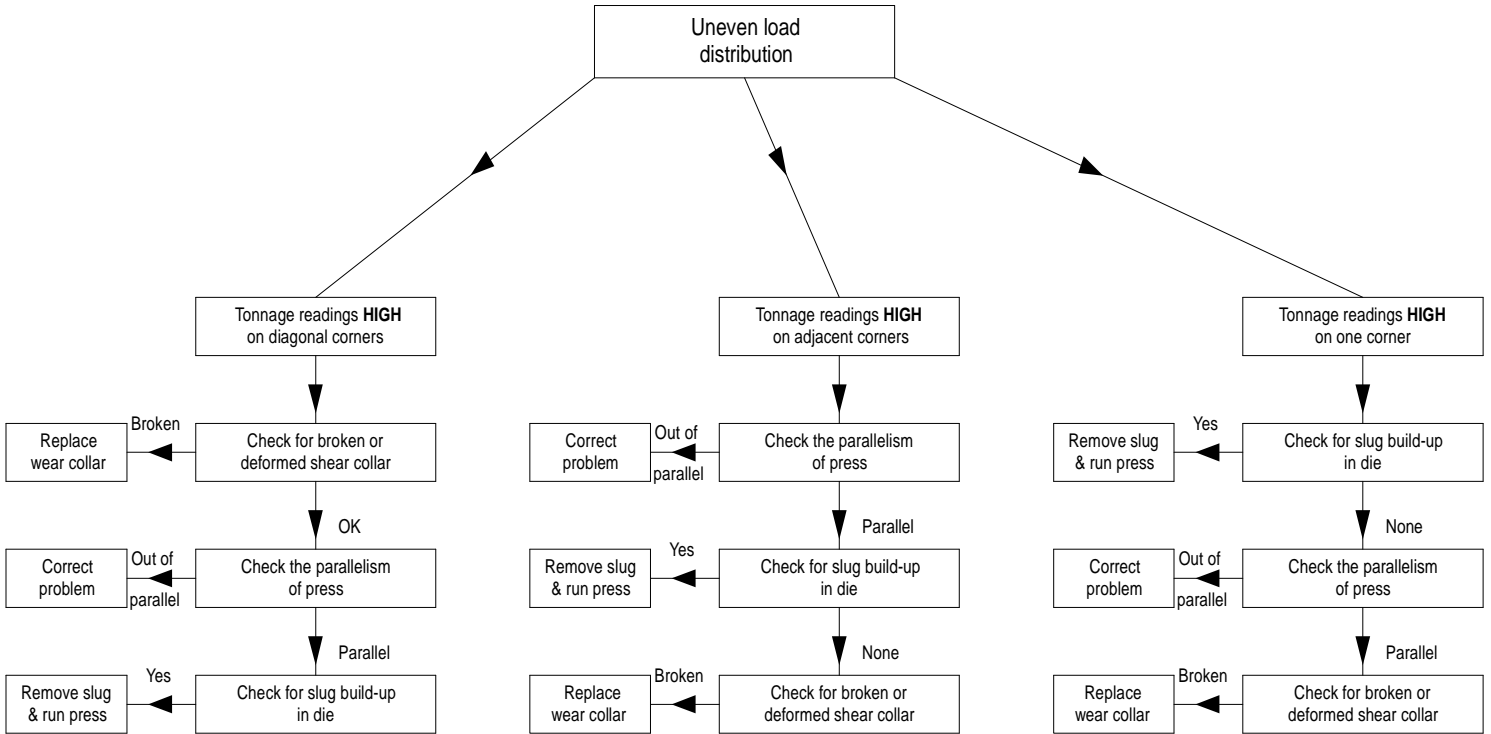

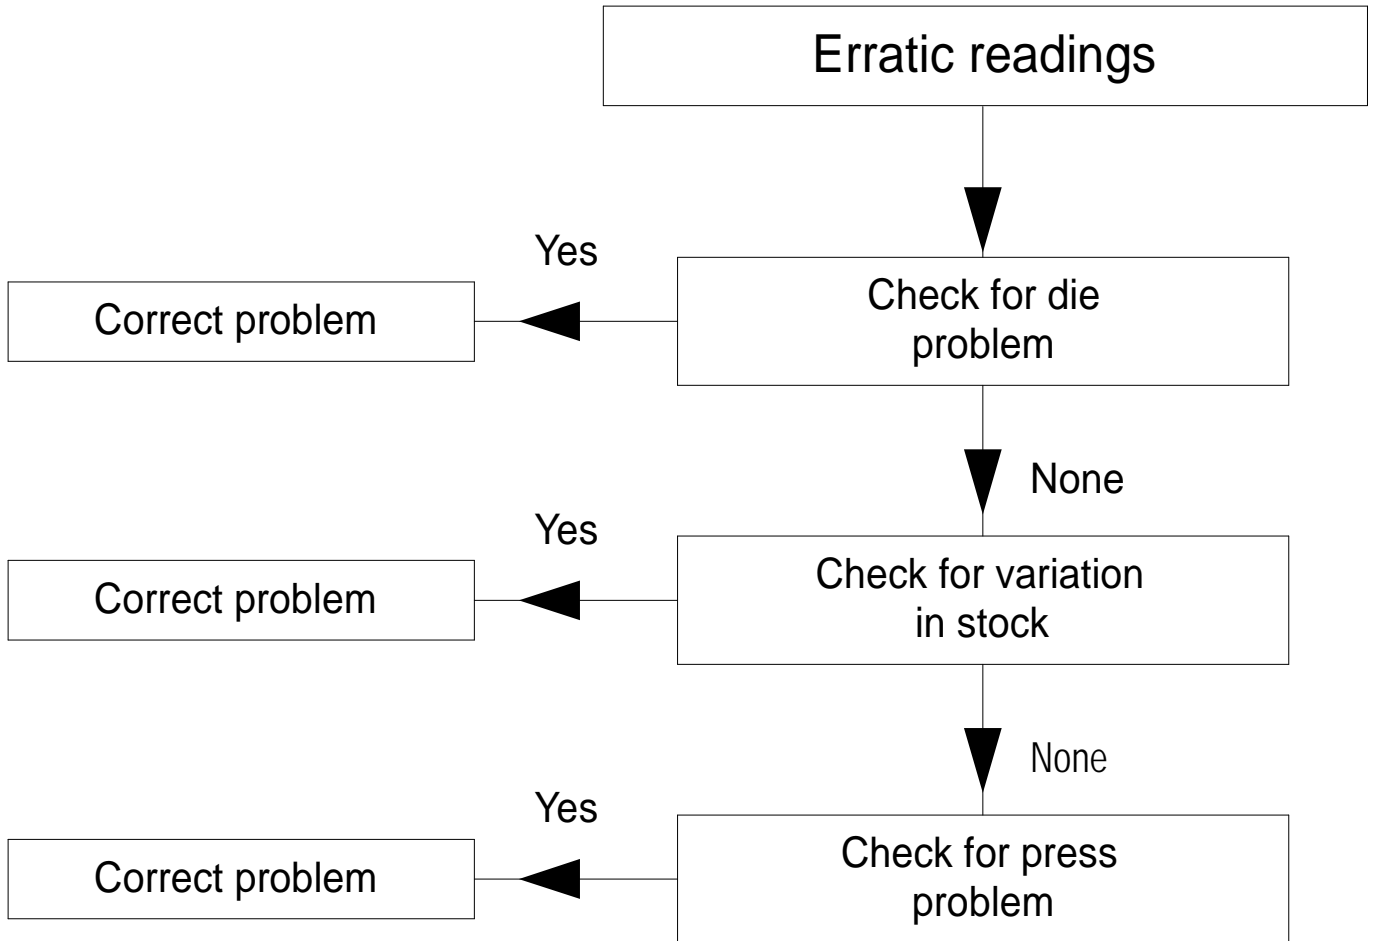

Electrical Specifications:

Backplane Current Consumption	220 MA at 5vd 173 MA at 24 vdc
Backplane Power Consumption	10W
Number of Channels	2 (isolated)
I/O Chassis Location	Any I/O module slot except 0
A/D Conversion Method	Successive Approximation - 12 bit
Normal Mode Rejection (between + input and - input)	50 db at 2000 gain
AMP roll-off frequency	650 Hz at 3000 Gain
Calibration	Manual Calibration
Isolation	500 VDC continuous between inputs and chassis ground, and between inputs and backplane

Physical Specifications:

LED Indicators	6 LED's for alarm status
Module ID Code	3535
Recommended Cable	Strain Gage Cable (Helm part number 6117)
Terminal Strip	8-pin removable

Environmental Specifications:

Operating Temperature	0°C to 60°C (32°F to 140°F)
Hazardous Environment Classification	Class 1 Division 2 Hazardous Environment

Input Specifications:

Type of Input	Strain Gage (350 ohm, 700 ohm)
Input Impedance	1K
Display Resolution	Up to 0.1% of full scale
Overall Module Accuracy	1% of full scale
Module Update Time	140 μ sec

Ladder Programming Summary:

Appendix B, Section 2 - ladder interface for a 2 channel tonnage system

Appendix B, Section 3 - ladder interface for a 4 channel tonnage system

Appendix B, Section 4 - ladder file required for every Forcegard module in your plc. Ex: 2 tonnage modules = 2 files, each with a different integer table and different I/O addresses.

- Note:**
- 1.) For 2 channel system - use ladder in sections 2 & 4
 - 2.) For 4 channel system - use ladder in sections 3 and have 2 files same as section 4, the file for CH'S 1 & 2 uses integer N10 and file for CH'S 3 & 4 uses integer N11.
 - 3.) If creating a system with more than 2 Forcegard modules, use Appendix B, Section 3 as a reference. This file has all the common integers needed for each Forcegard mod

- b.) If using rotary cam or prox probe and it' a:
 1.) 2 CH system, modify rung 2:3 (Appendix B, Section 2).



- 2.) 4 CH system, modify rung 3:3 (Appendix B, Section 3).



NOTE: Make sure prox probe or rotary cam is on between 90 to 220°

3.) Top Stop or E-Stop

- a.) 2 CH system, modify rung 2:13 (Appendix B, Section 2) for where
 your top stop or e-stop relay is connected.



NOTE: Whenever output module is located.

- b.) 4 CH system, modify rung 3:27 (Appendix B, Section 3).



NOTE: Whenever output module is located.


```

Rung 2:7
| CH2 HIGH |
| CAPACITY |
| ALARM |
| N10:16 |
|----] [---|
| 2 |
|-----|
|
Rung 2:8
| CH2 LOW |
| CAPACITY |
| ALARM |
| N10:16 |
|----] [---|
| 3 |
|-----|
|
Rung 2:9
| CH1 HIGH |
| TREND |
| ALARM |
| N10:16 |
|----] [---|
| 4 |
|-----|
|
Rung 2:10
| CH1 LOW |
| TREND |
| ALARM |
| N10:16 |
|----] [---|
| 5 |
|-----|
|
Rung 2:11
| CH2 HIGH |
| TREND |
| ALARM |
| N10:16 |
|----] [---|
| 6 |
|-----|
|
Rung 2:12
| CH2 LOW |
| TREND |
| ALARM |
| N10:16 |
|----] [---|
| 7 |
|-----|
|
Rung 2:13
CAUSES EITHER E-STOP OR TOP STOP RELAY TO DROP OUT WHEN THERE IS A TONNAGE
FAULT
| CH'S 1&2 |
| MODULE |
| ALARM BIT |
| N10:16 |
|----]/[---|
| 11 |
|-----|
|
Rung 2:14
|-----|
| +END+ |
|-----|

```

PANELVIEW
CH2 HIGH
CAPACITY
ALARM
INDICATOR
N10:24
()
2

PANELVIEW
CH2 LOW
CAPACITY
ALARM
INDICATOR
N10:24
()
3

PANELVIEW
CH1 HIGH
TREND
ALARM
INDICATOR
N10:24
()
4

PANELVIEW
CH1 LOW
TREND
ALARM
INDICATOR
N10:24
()
5

PANELVIEW
CH2 HIGH
TREND
ALARM
INDICATOR
N10:24
()
6

PANELVIEW
CH2 LOW
TREND
ALARM
INDICATOR
N10:24
()
7

E-STOP OR
TOP STOP
RELAY
O:2
()
0

Ladder Programming

Appendix B – Section 3

```
Rung 3:6
| PANELVIEW |
| & CH'S 1&2 |
| REVERSE |
| LOAD |
| BUTTON |
| N10:21 |
|-----] [-----] ( )-----
| 6 | 6
```

```
Rung 3:7
MOVES LOW INHIBIT COUNTS THAT IS ENTERED FROM PANELVIEW INTO PRESET OF THE LOW
ALARM INHIBIT COUNTER

|-----] [-----] ( )-----
| +MOV-----+ |
| +MOVE + |
| Source N10:17 |
| 4 |
| Dest C5:5.PRE |
| 4 |
|-----] [-----] ( )-----
```

```
Rung 3:8
COPIES # OF SAMPLES FROM FIRST TONNAGE MODULE INTO THE SECOND TONNAGE MODULE

|-----] [-----] ( )-----
| +MOV-----+ |
| +MOVE + |
| Source N10:18 |
| 3 |
| Dest N11:18 |
| 3 |
|-----] [-----] ( )-----
```

```
Rung 3:9
COPIES SCALE INFORMATION FROM CH'S 1&2 TONNAGE MODULE 1 INTO CH'S 3&4 TONNAGE
MODULE 2

|-----] [-----] ( )-----
| +MOV-----+ |
| +MOVE + |
| Source N10:15 |
| 1000 |
| Dest N11:15 |
| 1000 |
|-----] [-----] ( )-----
```

```
Rung 3:10
COPIES CH'S 1&2 TONNAGE MODULE'S MODE STATUS INTO CH'S 3&4 TONNAGE MODULE

|-----] [-----] ( )-----
| +MOV-----+ |
| +MOVE + |
| Source N10:20 |
| 8 |
| Dest N11:20 |
| 8 |
|-----] [-----] ( )-----
```

```
Rung 3:11
| CH1 HIGH |
| CAPACITY |
| ALARM |
| N10:16 |
|-----] [-----] ( )-----
| 0 | 0
```

```
Rung 3:12
| CH1 LOW |
| CAPACITY |
| ALARM |
| N10:16 |
|-----] [-----] ( )-----
| 1 | 1
```

```
Rung 3:13
| CH2 HIGH |
| CAPACITY |
| ALARM |
| N10:16 |
|-----] [-----] ( )-----
| 2 | 2
```


Rung 3:14	CH2 LOW CAPACITY ALARM N10:16] [----- 3	PANELVIEW CH2 LOW CAPACITY ALARM INDICATOR N10:24 ()----- 3
Rung 3:15	CH1 HIGH TREND ALARM N10:16] [----- 4	PANELVIEW CH1 HIGH TREND ALARM INDICATOR N10:24 ()----- 4
Rung 3:16	CH1 LOW TREND ALARM N10:16] [----- 5	PANELVIEW CH1 LOW TREND ALARM INDICATOR N10:24 ()----- 5
Rung 3:17	CH2 HIGH TREND ALARM N10:16] [----- 6	PANELVIEW CH2 HIGH TREND ALARM INDICATOR N10:24 ()----- 6
Rung 3:18	CH2 LOW TREND ALARM N10:16] [----- 7	PANELVIEW CH2 LOW TREND ALARM INDICATOR N10:24 ()----- 7
Rung 3:19	CH3 HIGH CAPACITY ALARM N11:16] [----- 0	PANELVIEW CH3 HIGH CAPACITY ALARM INDICATOR N10:24 ()----- 8
Rung 3:20	CH3 LOW CAPACITY ALARM N11:16] [----- 1	PANELVIEW CH3 LOW CAPACITY ALARM INDICATOR N10:24 ()----- 9
Rung 3:21	CH4 HIGH CAPACITY ALARM N11:16] [----- 2	PANELVIEW CH4 HIGH CAPACITY ALARM INDICATOR N10:24 ()----- 12
Rung 3:22	CH4 LOW CAPACITY ALARM N11:16] [----- 3	PANELVIEW CH4 LOW CAPACITY ALARM INDICATOR N10:24 ()----- 13

```

Rung 3:23
| CH3 HIGH | | PANELVIEW |
| TREND | | CH3 HIGH |
| ALARM | | TREND |
| N11:16 | | ALARM |
|-----] | | INDICATOR |
| 4 | | N10:24 |
| | | ( ) |
| | | 10 |

Rung 3:24
| CH3 LOW | | PANELVIEW |
| TREND | | CH3 LOW |
| ALARM | | TREND |
| N11:16 | | ALARM |
|-----] | | INDICATOR |
| 5 | | N10:24 |
| | | ( ) |
| | | 11 |

Rung 3:25
| CH4 HIGH | | PANELVIEW |
| TREND | | CH4 HIGH |
| ALARM | | TREND |
| N11:16 | | ALARM |
|-----] | | INDICATOR |
| 6 | | N10:24 |
| | | ( ) |
| | | 14 |

Rung 3:26
| CH4 LOW | | PANELVIEW |
| TREND | | CH4 LOW |
| ALARM | | TREND |
| N11:16 | | ALARM |
|-----] | | INDICATOR |
| 7 | | N10:24 |
| | | ( ) |
| | | 15 |

Rung 3:27
DROPS OUT RELAY WHEN THERE IS A TONNAGE FAULT
| CH'S 1&2 | CH'S 3&4 | | TOP STOP |
| MODULE | MODULE | | RELAY OR |
| ALARM BIT | ALARM BIT | | E-STOP |
| N10:16 | N11:16 | | RELAY |
|-----] | | 0:2 |
| 11 | 11 | | ( ) |
| | | 0 |

Rung 3:28
|-----+END+-----|

```

Ladder Programming

Appendix B – Section 4

```

Rung 3:0
| PANELVIEW | | CH'S 1&2 |
| LOW ALARM | | MODULE |
| INHIBIT | | LOW |
| INDICATOR | | INHIBIT |
| | | ALARM |
| N10:16 | | O:4 |
| ] [-----] | | ( ) |
| 10 | | 6 |

Rung 3:1
| PANELVIEW | | CH'S 1&2 |
| AND CH'S | | MODULE |
| 1&2 MODULE | | LOOK |
| CAM CYCLE | | WINDOW |
| BIT | | SIGNAL |
| N10:21 | | O:4 |
| ] [-----] | | ( ) |
| 0 | | 0 |

Rung 3:2
| PANELVIEW | | CH'S 1&2 |
| MODE | | MODULE |
| BUTON | | BYPASS BIT |
| (BYPASS) | | |
| N10:20 | | O:4 |
| ] [-----] | | ( ) |
| 3 | | 1 |

Rung 3:3
| PANELVIEW | | CH'S 1&2 |
| MODE | | MODULE |
| BUTON | | PEAK MODE |
| (PEAK) | | BIT |
| N10:20 | | O:4 |
| ] [-----] | | ( ) |
| 4 | | 2 |

Rung 3:4
| PANELVIEW | | CH'S 1&2 |
| MODE | | MODULE |
| BUTON | | MONITOR |
| (MONITOR | | PARTS BIT |
| PARTS) | | O:4 |
| N10:20 | | ( ) |
| ] [-----] | | 3 |
| 5 | |


Rung 3:5
| PANELVIEW | | CH'S 1&2 |
| & CH'S 1&2 | | MODULE |
| REVERSE | | REV LOAD |
| LOAD | | BIT |
| BUTON | | O:4 |
| N10:21 | | ( ) |
| ] [-----] | | 5 |
| 6 | |

Rung 3:6
| CH'S 1&2 | | PANELVIEW |
| LEARN | | LEARN |
| CYCLE BIT | | CYCLE |
| I:4 | | INDICATOR |
| ] [-----] | | N10:16 |
| 9 | | ( ) |
| | | 9 |

Rung 3:7
| PANELVIEW |
| MODE |
| BUTON |
| (MONITOR |
| PARTS) |
| N10:20 |
| ] [-----] |
| 5 |

+MOV-----+
+MOVE +--+
| Source 0 |
| Dest N10:1 |
| 0 |
+-----+
+MOV-----+
+MOVE +--+
| Source 0 |
| Dest N10:2 |
| 0 |
+-----+

```

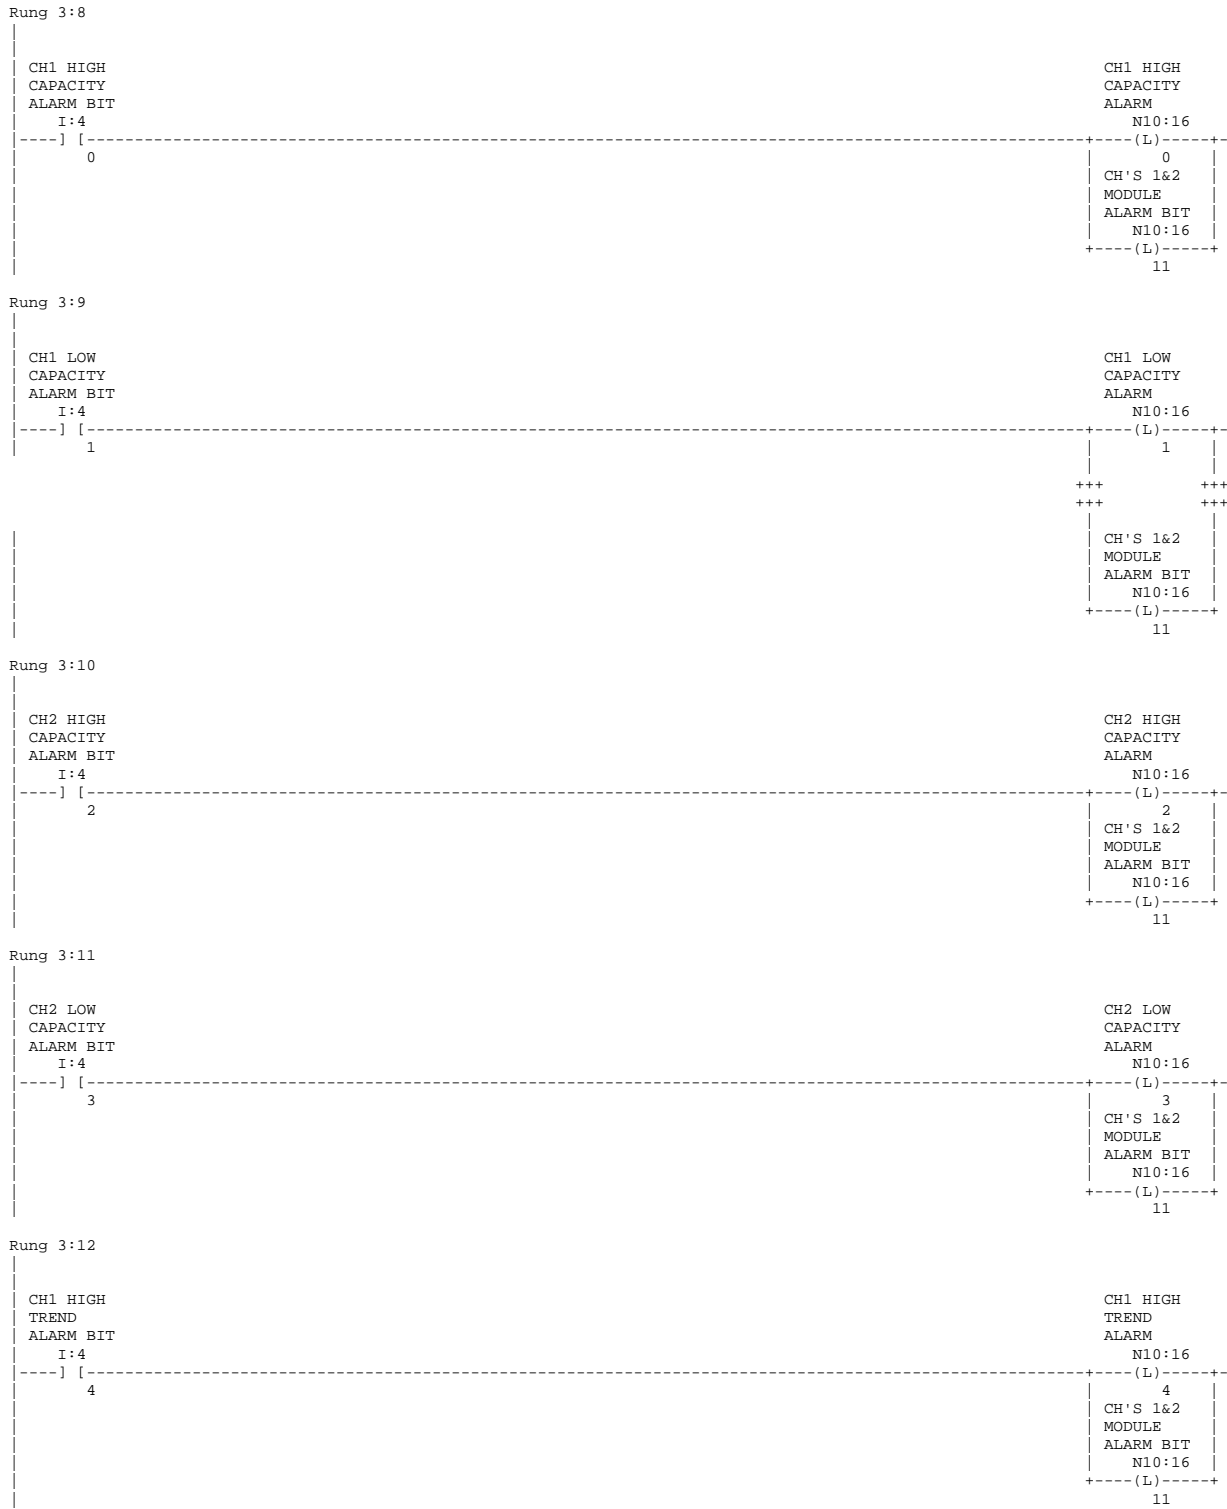

Ladder Programming

Appendix B – Section 4

Rung 3:13

CH1 LOW
TREND
ALARM BIT
I:4
] [-
5

CH1 LOW
TREND
ALARM
N10:16
-(L)-
5
CH'S 1&2
MODULE
ALARM BIT
N10:16
-(L)-
11

Rung 3:14



CH2 HIGH
TREND
ALARM BIT
I:4
] [-
6

CH2 HIGH
TREND
ALARM
N10:16
-(L)-
6
CH'S 1&2
MODULE
ALARM BIT
N10:16
-(L)-
11


Rung 3:15

CH2 LOW
TREND
ALARM BIT
I:4
] [-
7

CH2 LOW
TREND
ALARM
N10:16
-(L)-
7
CH'S 1&2
MODULE
ALARM BIT
N10:16
-(L)-
11

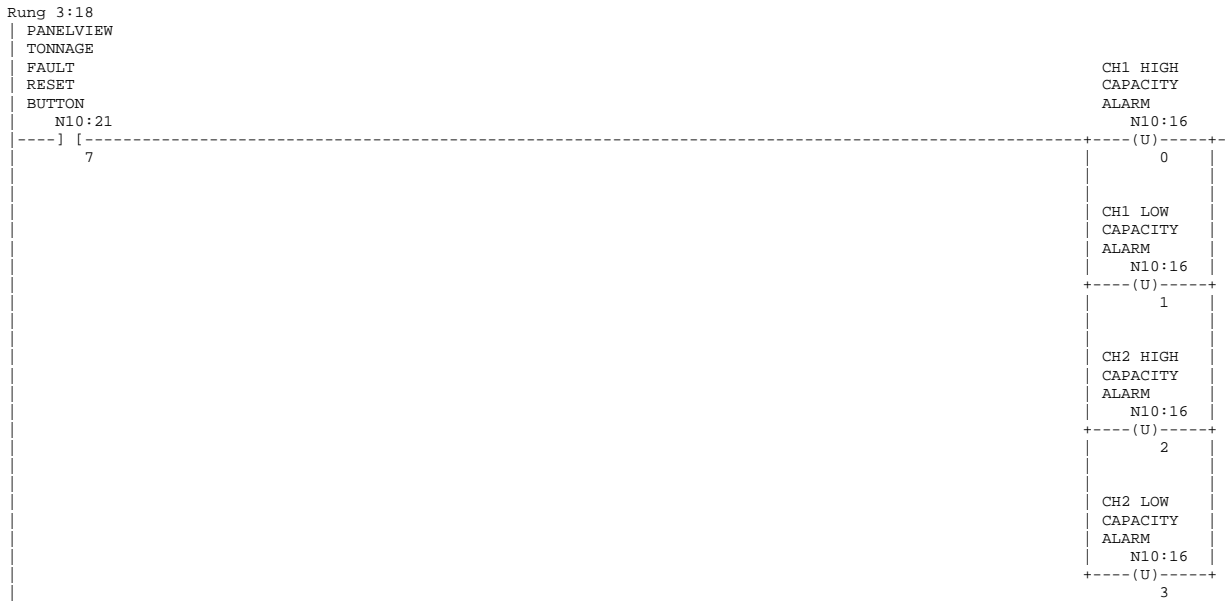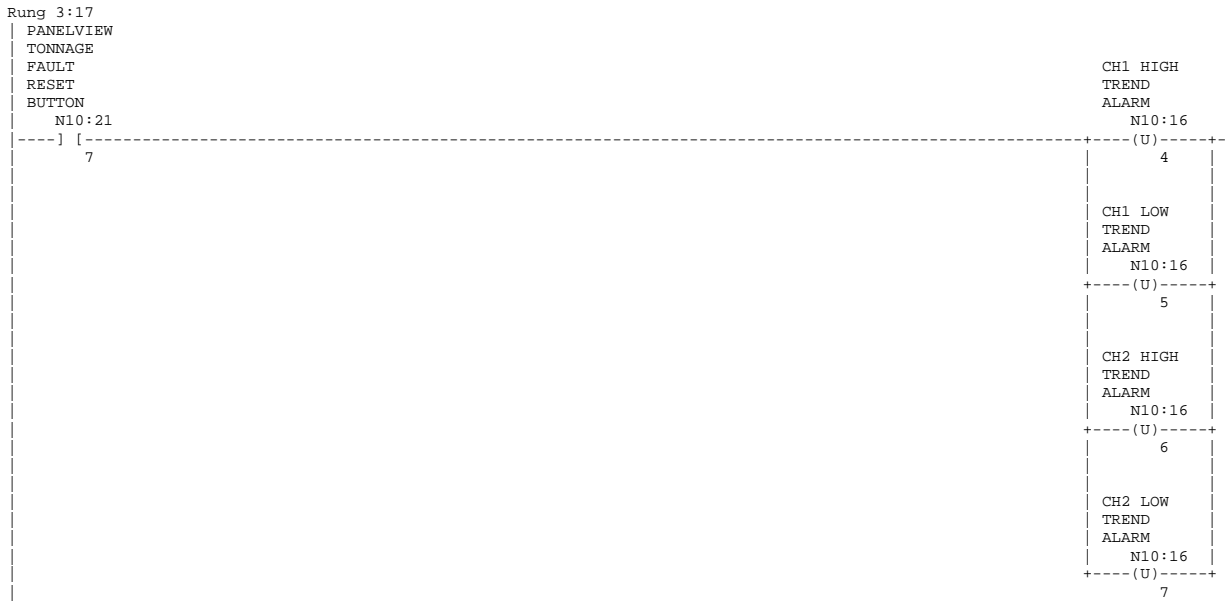



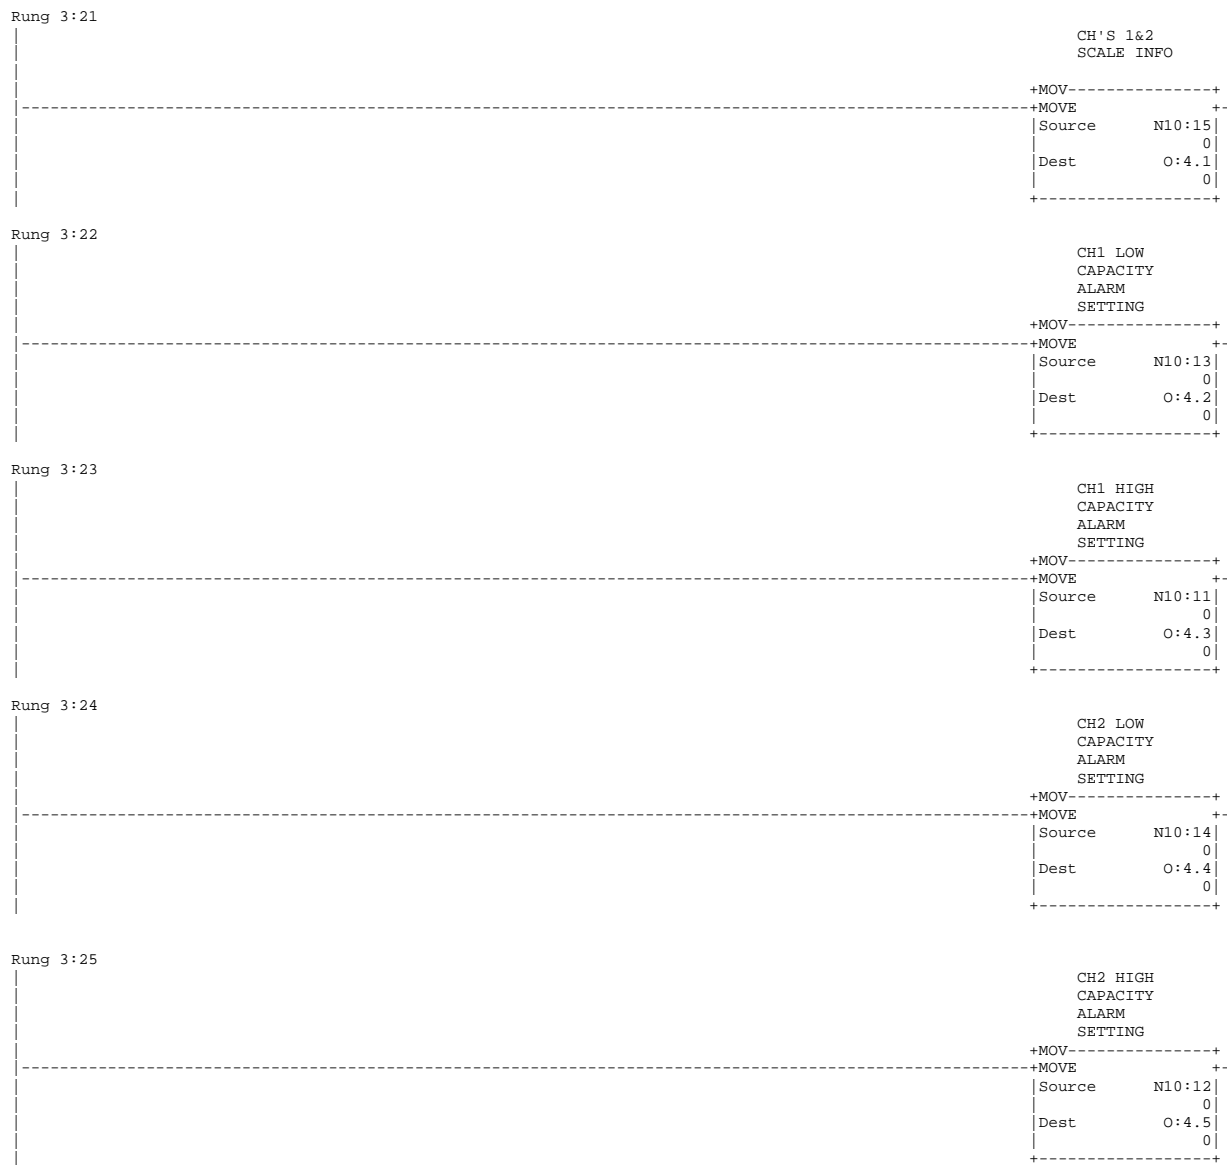


```

Rung 3:26
THIS RUNG CALCULATES THE TREND DEVIATION WHICH IS DISPLAYED ON THE PANELVIEW
PANELVIEW
MODE
BUTTON
(MONITOR
PARTS)
N10:20
] [-----]
5
    
```

```

+SUB-----+
+SUBTRACT
Source A    I:4.5
|           0
Source B    I:4.3
|           0
Dest        N10:0
|           0
+-----+
+MUL-----+
+MULTIPLY
Source A    N10:0
|           0
Source B    100
|           0
Dest        N10:0
|           0
+-----+
          CH1 TREND
          DEVIATION
+DIV-----+
+DIVIDE
Source A    N10:0
|           0
Source B    I:4.3
|           0
Dest        N10:1
|           0
+-----+
    
```


```

Rung 3:27
THIS RUNG CALCULATES THE TREND DEVIATION WHICH IS DISPLAYED ON THE PANELVIEW
PANELVIEW
MODE
BUTTON
(MONITOR
PARTS)
N10:20
] [-----]
5
    
```


```

+SUB-----+
+SUBTRACT
Source A    I:4.6
|           0
Source B    I:4.4
|           0
Dest        N10:0
|           0
+-----+
+MUL-----+
+MULTIPLY
Source A    N10:0
|           0
Source B    100
|           0
Dest        N10:0
|           0
+-----+
          CH2 TREND
          DEVIATION
+DIV-----+
+DIVIDE
Source A    N10:0
|           0
Source B    I:4.4
|           0
Dest        N10:2
|           0
+-----+
    
```


Rung 3:28
TREND HIGH AND LOW ALARM CALCULATION

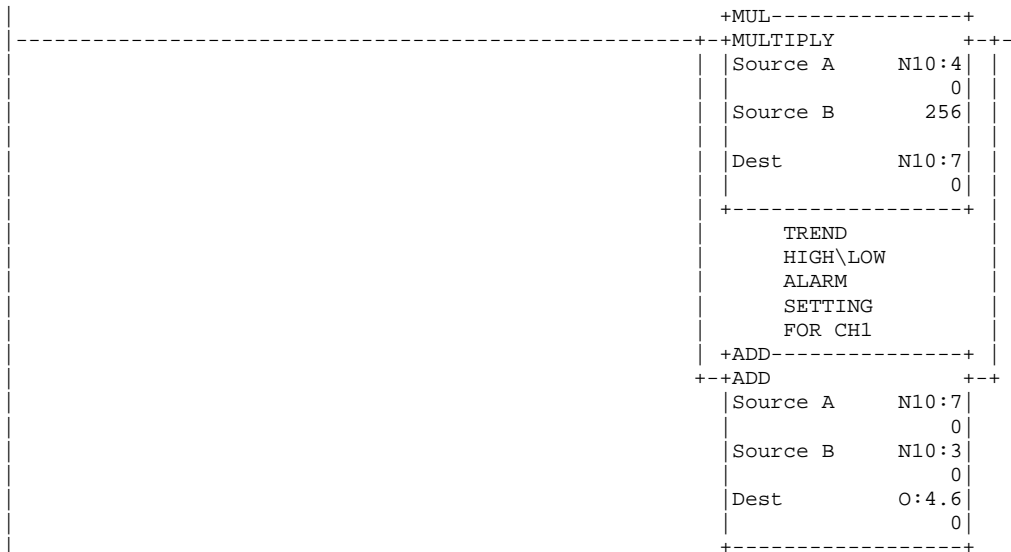

Rung 3:29
TREND HIGH AND LOW ALARM CALCULATION

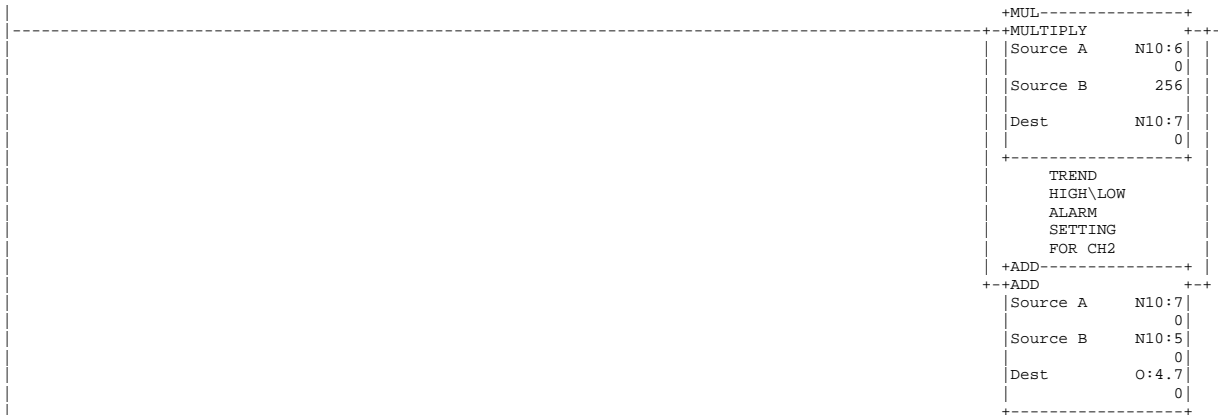

Rung 3:30
DISPLAYS PEAK TONNAGE FOR CHANNEL 1 AS LONG AS MODULE IS NOT IN SETUP MODE

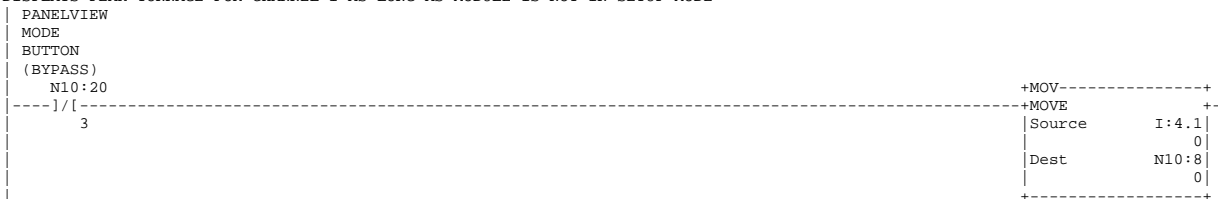

Rung 3:31
DISPLAYS CAL NUMBER FOR CHANNEL 1 ON PANELVIEW



Rung 3:32
 DISPLAYS PEAK TONNAGE FOR CHANNEL 2 AS LONG AS MODULE IS NOT IN SETUP MODE

```

  PANELVIEW
  MODE
  BUTTON
  (BYPASS)
  N10:20
  ] [-----]
  3
  +MOV-----+
  +MOVE      +
  |Source     I:4.2|
  |           0|
  |Dest       N10:9|
  |           0|
  +-----+
  
```

Rung 3:33
 DISPLAYS CAL NUMBER FOR CHANNEL 2 ON PANELVIEW

```

  +MOV-----+
  +MOVE      +
  |Source     I:4.2|
  |           0|
  |Dest       N10:23|
  |           0|
  +-----+
  
```

Rung 3:34

```

  PANELVIEW
  ENTRY
  N10:18
  ] [-----]
  0
  D0 BIT OF
  SAMPLE
  COUNT
  0:4
  ( )
  8
  
```

Rung 3:35

```

  PANELVIEW
  ENTRY
  N10:18
  ] [-----]
  1
  D1 BIT OF
  SAMPLE
  COUNT
  0:4
  ( )
  9
  
```

Rung 3:36

```

  PANELVIEW
  ENTRY
  N10:18
  ] [-----]
  2
  D2 BIT OF
  SAMPLE
  COUNT
  0:4
  ( )
  10
  
```

Rung 3:37

```

  PANELVIEW
  ENTRY
  N10:18
  ] [-----]
  3
  D3 BIT OF
  SAMPLE
  COUNT
  0:4
  ( )
  11
  
```

Rung 3:38

```

  PANELVIEW
  ENTRY
  N10:18
  ] [-----]
  4
  D4 BIT OF
  SAMPLE
  COUNT
  0:4
  ( )
  12
  
```

Rung 3:39

```

  SAMPLE
  COUNT FROM
  MODULE
  +MOV-----+
  +MOVE      +
  |Source     I:4.7|
  |           0|
  |Dest       N10:19|
  |           0|
  +-----+
  
```

Rung 3:40

```

  +END+
  
```